



240V Mains Powered Photoelectric Smoke Alarm with 3V built-in battery backup

Model: FFA-710




AS3876: 2014



Attention: Before using this smoke alarm please take a few minutes to read this user manual carefully.

SPECIFICATION	
Model	FFA-710
Executive standard	AS3786:2014
The alarm condition audible signal pattern	ISO8201
Power supply	220 – 240V ac 50Hz with Lithium battery backup
Backup	10 years
Maximum current	<70mA
Alarm volume	> 85dB at 3 meters
Hush/Silence time	approx. 8 minutes
Interconnection	Hardwired: up to 30 smoke alarms, Wireless RF: up to 22 smoke alarms
Sound pattern	ISO8201 (BI 0.5s – pause 0.5s – BI 0.5 pause 0.5s – BI 0.5s – pause 1.5s with the red LED flash, repeat this alarm pattern

This unit is a 220 – 240V 50Hz power supply device with 3v lithium battery backup, battery lifetime is 10 years.

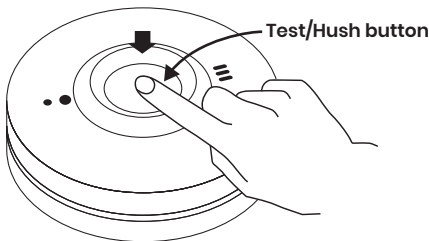

PAIRING

Place the devices that need to be paired within 1 meter of each other.

1.1 Choose a smoke alarm as the "master", press the "Test" button and hold, release after the green light flashes 3 times, the red light will continue to flash for about 1 minute. Other devices will be paired automatically, they will beep once and have a long green light.

1.2 After pairing all devices, go back to "master device" and press the test button once to finish group pairing, other devices beep once again and green light turn off.

ADDING A DEVICE

If other devices have been paired to a group and you want to add a device, Choose a smoke alarm in the group as the "master", Place the new device 1m away and then press the "Test" button on the master and hold, release after the green light flashes 3 times, the red light will continue to flash for about 1 minute.

It will beep quickly and flash green light waiting for the new device to be paired, if you choose to connect, you can press and hold the test button on the new device and release it after the green light flashes once. When you hear the beep, it means it is now paired to the current group.

After pairing all devices, go back to "master device" and press the test button once to finish group pairing, other devices beep once again and green light turn off.


REMOVING A DEVICE

Removing paired device: Press and hold the "Test" button on the device you wish to remove, release the "Test" button when the green light has flashed 4 times. The device is now removed.

WIRING DIAGRAM FOR WIRED INTERCONNECTION


This smoke alarm has hardware interconnection function, each smoke alarm can be interconnected by cable to create a interconnection group, so that if one alarm is activated, all interconnected alarms will sound together.

When connecting circuit please DO NOT TOUCH the power on terminal, connecting the cable to the right terminal position and make sure all the screws are fixed and tightened. Check the cable to ensure no cross line for A: Active cable and I: Interconnect cable.

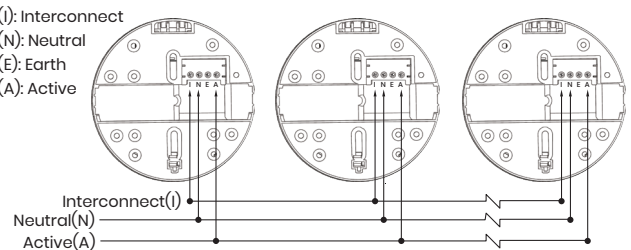

INSTALLATION LOCATION ADVICE


Install at least one smoke alarm in each bedroom and on each floor. For detailed information, please refer to the legislation/building codes in your state. At a minimum, smoke alarms should be located in sleeping areas and potential sources of fire. In single story residential buildings with only one sleeping area, smoke detectors should be installed in the hallway as close as possible to living accommodations. To ensure clear sound in the bedroom, the smoke alarm should be kept at least 3 meters away from the bedroom door. You may need to install multiple smoke alarms, especially if the corridor length exceeds 15 meters. At least two smoke alarms are required outside each sleeping area in a single story residential building and two separate sleeping areas. In multi story or split story homes, at least one smoke alarm should be installed between the stairwell and any room with a fire, starting from the circulation area on each floor and forming partial escape routes (usually corridors and stair platforms). The bedroom should be pre installed with additional alarms for fires caused by wiring, lighting, electrical appliances, smokers, or other hazardous factors. To achieve the best protection effect, smoke alarms should be installed at every location.

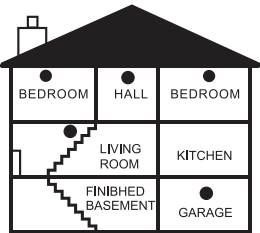

WARNING: !

This smoke alarm must be installed by a qualified electrician.

This smoke alarm is not suitable for installation on walls (vertical); Alarm will not attach to mounting bracket unless battery is installed correctly. Forcefully attaching to mounting bracket without properly installing the battery may cause structural damage to the device

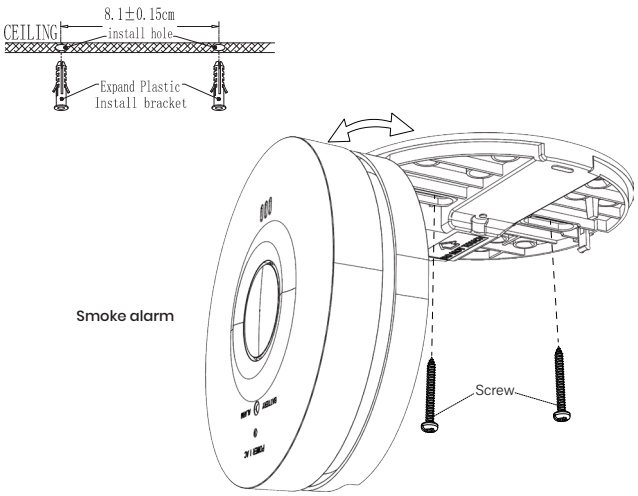

The function of green LED:

LED constantly on indicates mains power supply


The function of red LED:

The red LED lights up every 60 seconds, indicating that the device is working properly and the backup battery is available.

After ensuring that both the green and red LEDs are working properly, you can press the "Test/Mute" button and release it to check if the smoke alarm is working. The wiring installation must comply with local regulatory requirements.

All wiring shall use 240V insulated wire with a diameter of not less than 1.0mm. Including interconnect wiring

Terminal terms: Active and Neutral, Loop and Interconnect terminals — each capable of accommodating 2 x 1.5 mm² wires.

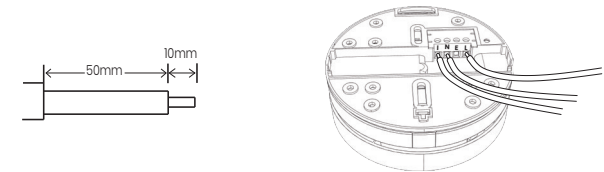

Attention: "May cause personal injury and equipment damage/fault"


- 1. All interconnected smoke alarms must be powered by the same circuit.
- 2. Public neutral points must be used to ensure proper functioning of interconnectivity.
- 3. Do not connect interconnects to active or neutral.
- 4. Up to 30 smoke alarm circuits can be installed with wired interconnection.

Not following these instructions may result in personal injury and equipment damage/malfunction.

WARNING:

Electric shock hazard. Before cleaning according to the cleaning instructions, please disconnect the mains switch that supplies power to the alarm.

*Apart from the external wireless RF module, there are no components inside the product that can be replaced by users

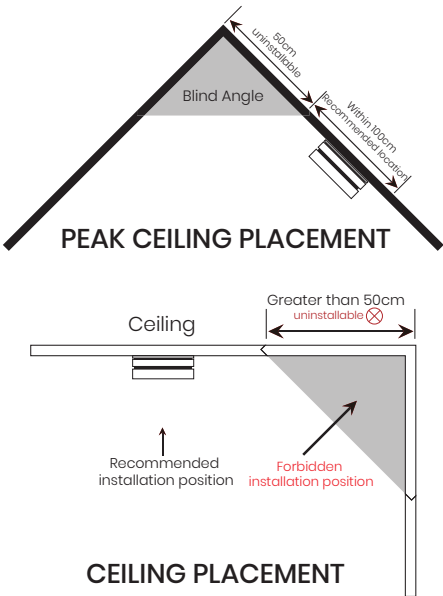

OPERATION AND TESTING

Testing:

Press the test button to perform the test. If the alarm and battery are working properly, an alarm will sound. If no alarm is sounding, it may be caused by a malfunction in the alarm or other wiring.

Attention:

Weekly testing is required.

The green LED light should remain on in the normal state, and the red LED should flash every 60 seconds, indicating that the alarm is working properly.

Alarm conditions:

When the alarm detects combustion products and sounds an alarm, the red LED will light up three times continuously for ISO8201 (BI 0.5s - pause 0.5s - BI 0.5s pause 0.5s - BI 0.5s - pause 1.5s with the red LED flash, repeat this alarm pattern. The alarm will continue to sound until the smoke is cleared.

Low voltage state:

The alarm requires sufficient power (3V DC battery) to operate continuously. If the smoke alarm enters a low voltage state. The device emits an audible "BI" every 40 seconds and flash the red LED once. When this situation occurs, the alarm must be replaced immediately. Your smoke alarm will continue to emit low voltage alarms for approximately 30 days, and the alarm will not function properly, which means that the smoke alarm will not sound the alarm correctly to you in case of a fire. After replacing the battery, the low battery warning will stop.

Alarm silence:

Attention:

When the smoke alarm emits an alarm state:

Press the button, and the alarm will stop sounding. If smoke persists, the alarm will resume sounding after about 8 minutes. During the silence period, if the smoke concentration decreases and the alarm will return to normal operation. The red LED status light will flash every 60 seconds.

Battery replacement:

The secondary backup power supply of this smoke alarm is powered by a 3V Lithium battery. The lifespan of the battery is 10 years.

Attention:

Battery is not replaceable

Smoke alarm fault:


If the smoke alarm has a fault, it will sound a "BI - BI" and flash the red LED twice at the same time every 60 seconds.

WHAT TO DO IN CASE OF A FIRE IN YOUR HOME

- 1. Don't panic, stay calm.
- 2. Alert small children in the home.
- 3. Leave immediately according to your escape plan. Every second is important, so don't waste time getting dressed or carrying valuable items.
- 4. When leaving, do not open any internal doors unless you first feel their surface. If it is very hot or if you see smoke seeping out from cracks, do not open that door! Instead, use the backup exit. If it's cold inside the door, lean your shoulder against it, open it slightly, and be ready to slam it shut when heat and smoke flood in.
- 5. If there is smoke in the air, stay close to the floor. Gently breathe with a cloth, wet if possible.
- 6. Press and release the mute button, and the alarm sound will stop. Your alarm will be muted and enter a sensitivity reset cycle of approximately 8 minutes. After leaving, go to the meeting location you have chosen and make sure everyone is there.
- 7. Call the fire department from your neighbor's house - not from yours! Don't return to your home until the fire officer that is all right to do so.

ROUTINE MAINTENANCE

- 1. In addition to weekly testing, the alarm requires cleaning at least once a month to remove dust, dirt, or debris.
- 2. Use a vacuum cleaner with the soft brush to vacuum all sides and cover of the smoke alarm.
- 3. This alarm has a low battery monitor. When the battery is low, the alarm sound "BI" approximately every 40 seconds and the red LED flashes once for at least 30 days.

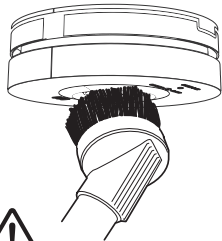

IMPORTANT:

Do not attempt to remove the cover to clean the inside, as this will affect the warranty.

 
Cautions:

- 1. Photoelectric smoke detectors can reduce the likelihood of a disasters, but cannot guarantee 100% safety.
- 2. To ensure your safety to the maximum extent possible, please strictly follow this manual to install all smoke detectors.
- 3. Keep the detector clean. Do not allow dust to accumulate, test at least once a week.
- 4. If it is not working properly, please replace it immediately.

WARRANTY INFORMATION

Only warrants this smoke alarm to the original purchase. Warrants each new smoke alarm is free from defects and workmanship under normal use and service for a period of 2 years from the date of purchase. This warranty does not cover damage resulting from accident, misuse or abuse or lack of reasonable care of the product.

If you have any questions about the product or require any assistance, please contact us:



FIRE FACTORY AUSTRALIA

T: 1300 367 744
A: 10 Victoria St, Smithfield, NSW 2164, Australia
W: www.firefactory.com.au

