

Alarm Routing Equipment

Connection Modules



Alarm Routing Equipment (ARE) connection modules

Provides input/output from the CFP-16 to a common range of Alarm Routing Equipment.

- Mounts into standard annunciator slot(s)
- No additional relay board required

Part #	Description
ARE-T	ARE interface to suit Centaur
ARE-R	ARE interface to suit Romteck and Centaur II
ARE-CR	ARE interface to suit Code Red
ARE	ARE interface Board Assembly to suit custom jobs

See Page 49 for ASE mounting brackets for connection using expansion relays

Fire Factory Australia

For general enquiries, please email
sales@firefactory.com.au

Fire Factory Australia
Unit 2/2 Parramatta Rd,
Granville NSW 2142, Australia
Telephone (02)9756 0087



Honeywell