


IFS-993F

Honeywell

Strobe/Sounder Interface

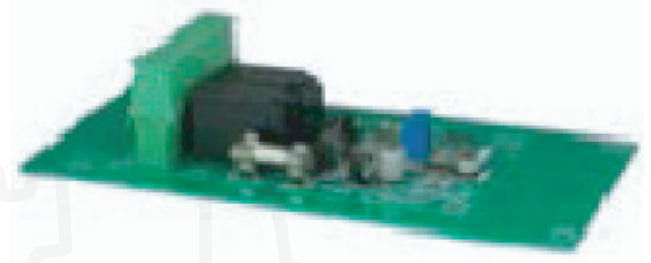

Strobe/Sounder Interface

5A reversible output for use with dual strobes

Part #	Description
IFS-993F	Monitored Strobe/Sounder driver card, 5 Amp fused reversing output and fault output

FFA
Fire Factory Australia

For general enquiries, please email
sales@firefactory.com.au

Fire Factory Australia
Unit 2/2 Parramatta Rd,
Granville NSW 2142, Australia
Telephone (02)9756 0087

